INSTRUCTION SHEET
High-Cut Front Roller Kit
Service Kit No. 68634

This kit is intended for use on Jacobsen® Greens King™ mowers where the desired height of cut is greater than 7/16 inch. The kit will extend the range up to 15/16 inch.

⚠ CAUTION

Before you install this kit, read the **Safety & Opertion Manual** to become familiar with the mower, the controls and proper use of the equipment.

Stay alert for potential hazards and follow all safety precautions. Read all instructions completely and make sure you understand them before proceeding with the assembly.

⚠ WARNING

Before you clean, adjust, or repair this equipment, disengage all drives, make sure that the unit is parked on a flat and level surface. Lower cutting units to the ground, engage parking brake, stop engine, remove key from switch and disconnect Negative (BLACK) battery cable to prevent injuries

Take this time to thoroughly inspect the mower and perform other required maintenance.

Installation

1. Remove roller brackets **(Item 1)** and **(Item 2)** from the cutting unit.
2. Reassemble the height adjusters and all other accessories to the mower.
3. Center the front roller between the new mounting brackets and secure the roller with the new set screw **(Item 3)** and then tighten nut **(Item 4)** against the bracket. [**See Illustration]**
4. Adjust the accessories as instructed on the instruction sheet of the accessory being used.

Maintenance

Keep all equipment clean, properly adjusted, lubricated, and all hardware securely fastened.

Parts List

Item	Part No.	Qty.	Description
1	3008435	1	Bracket
2	3008437	1	Bracket
3	352737	2	Set Screw
4	443102	2	Nut, 1/4-20 Hex

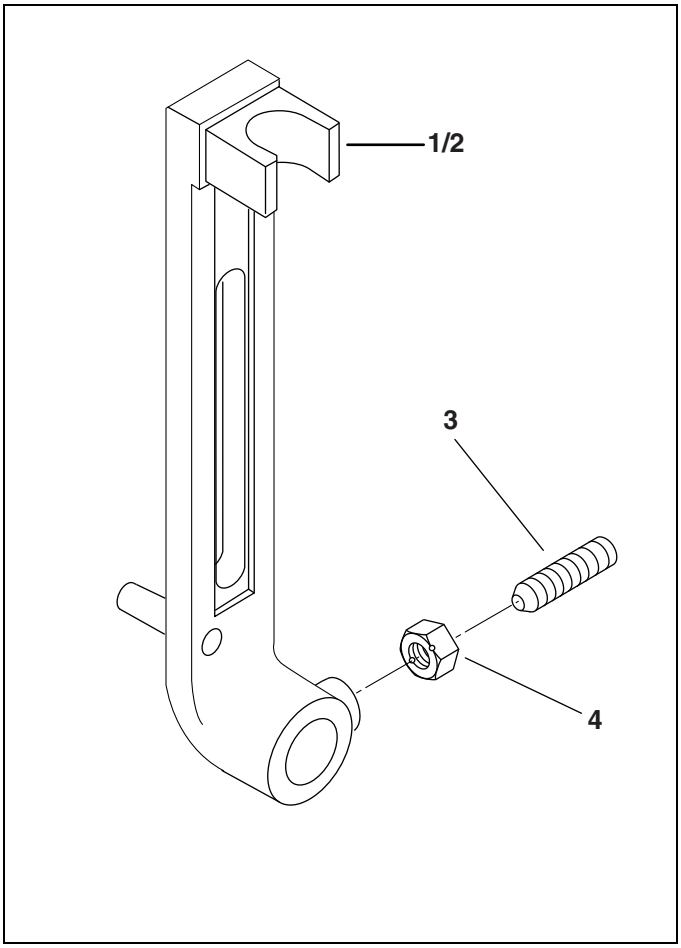


Figure 1